


NOTES:

- 1. SPARE CHANNELS WHEN NOT IN USE - SLIDE SWITCH INTO THE UP POSITION
- 2. ALARM SLIDE SWITCH - TO BE POSITIONED AS SHOWN ON COMMISSIONING
- 3. INCOMING SUPPLY IS SINGLE PHASE AC IN ACCORDANCE WITH CURRENT LPC RULES.

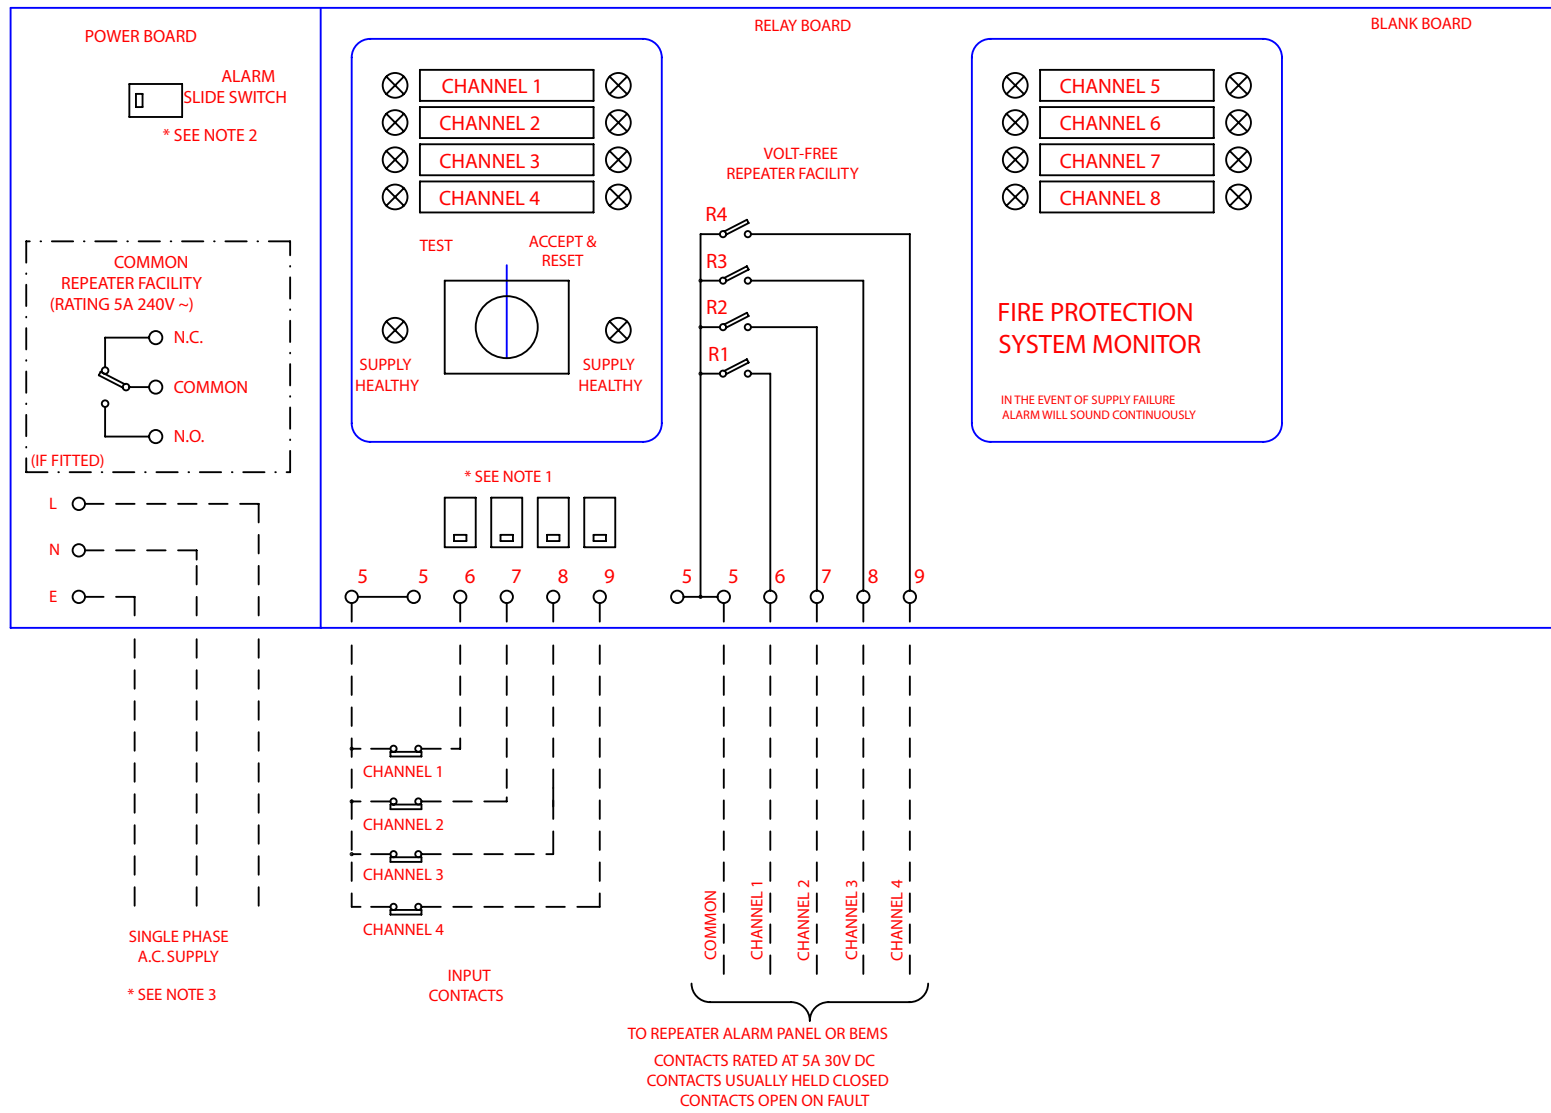

CHANNEL	1	2	3	4
* PART 1	PUMP ON DEMAND	AC PHASE FAILURE	ELECTRIC PUMP RUNNING	FIRE IN PUMP HOUSE
* PART 2	PUMP ON DEMAND	DIESEL CONTROLLER FAULT	DIESEL PUMP RUNNING	FIRE IN PUMP HOUSE
PART 3	CONTROLLER IN OFF OR MANUAL	ENGINE RUNNING	FAULT ON CONTROLLER	FIRE IN PUMP HOUSE
PART 4	PUMP RUNNING	PHASE FAILURE	PHASE REVERSAL	
PART 5	PUMP ON DEMAND	AC PHASE FAILURE	ELECTRIC PUMP RUNNING	TANK OVERFLOW
PART 6				
PART 7				
PART 8				
PART 9				
PART 10				
PART 11				
PART 12				
PART 13				
PART 14				
PART 15				
PART 16				
PART 17				
PART 18				

1e * LEGENDS AVAILABLE IN DUTCH, ENGLISH, NORWEGIAN AND POLISH.
1d

2nd ISSUE	Len Porter	ID	25/04/2000
1st ISSUE	JRA	JB	13/12/96
REVISION	DRAWN BY	CHECKED BY	DATE

NORTH WEST SWITCHGEAR Ltd

MORECAMBE LANCASHIRE

**4 CHANNEL ALARM PANEL
AC VERSION**

A3-11340