


**NOTES:**

1. SPARE CHANNELS WHEN NOT IN USE - SLIDE SWITCH INTO THE UP POSITION
2. ALARM SLIDE SWITCH - TO BE POSITIONED AS SHOWN ON COMMISSIONING
3. INCOMING SUPPLY IS SINGLE PHASE AC IN ACCORDANCE WITH CURRENT LPC RULES.
4. CONNECT +VE BATTERY WIRE INTO TERMINAL BLOCK ON COMMISSIONING.

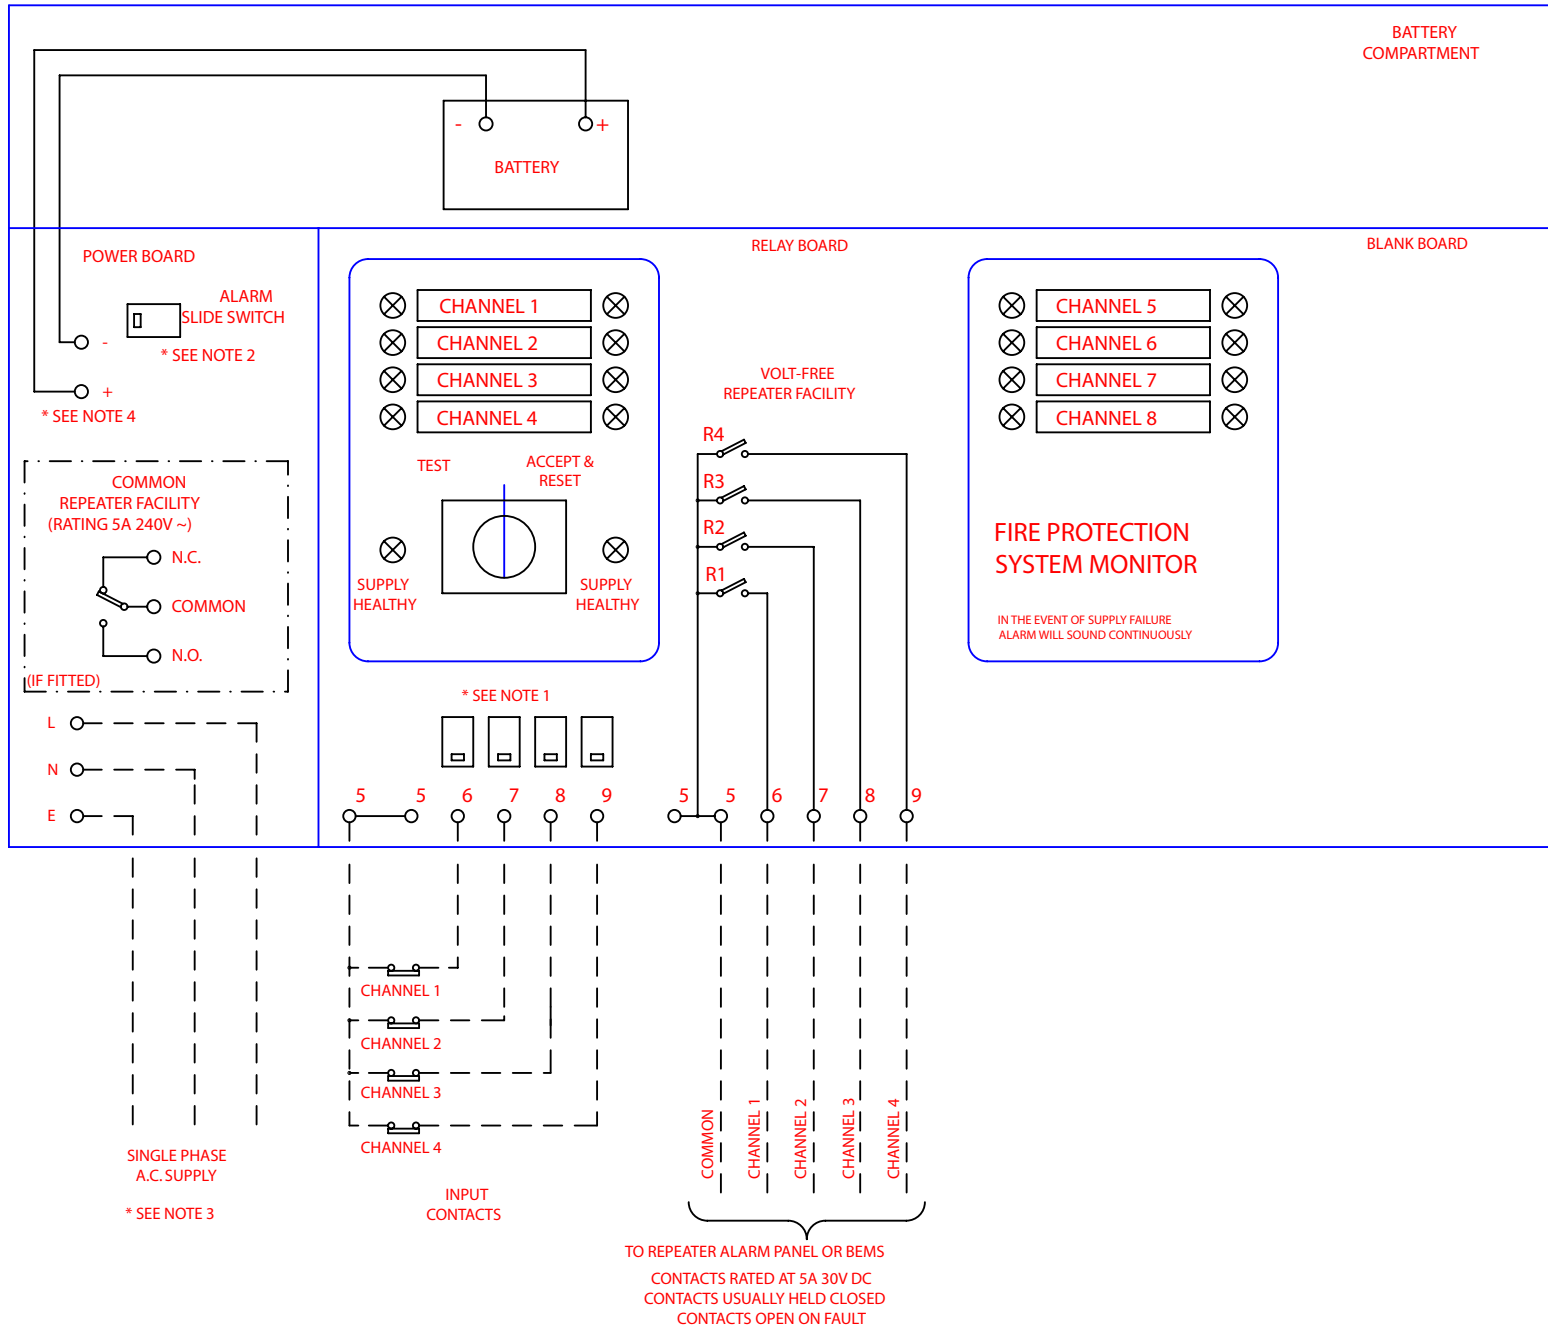

CHANNEL	1	2	3	4
* PART 1	PUMP ON DEMAND	AC PHASE FAILURE	ELECTRIC PUMP RUNNING	FIRE IN PUMP HOUSE
* PART 2	PUMP ON DEMAND	DIESEL CONTROLLER FAULT	DIESEL PUMP RUNNING	FIRE IN PUMP HOUSE
PART 3	CONTROLLER IN OFF OR MANUAL	ENGINE RUNNING	FAULT ON CONTROLLER	FIRE IN PUMP HOUSE
PART 4	PUMP RUNNING	PHASE FAILURE	PHASE REVERSAL	
PART 5				
PART 6				
PART 7				
PART 8				
PART 9				
PART 10				
PART 11				
PART 12				
PART 13				
PART 14				
PART 15				
PART 16				
PART 17				
PART 18				

1e \* LEGENDS AVAILABLE IN DUTCH, ENGLISH, NORWEGIAN AND POLISH.  
1d

3rd ISSUE	Len Porter	ID	25/04/2000
2nd ISSUE	Len Porter	ID	09/12/1999
1st ISSUE	JRA	JB	03/01/97
REVISION	DRAWN BY	CHECKED BY	DATE
<b>NORTH WEST SWITCHGEAR Ltd</b>			
MORECAMBE		LANCASHIRE	
<b>4 CHANNEL ALARM PANEL DC VERSION</b>			
<b>A3-11363</b>			