



**FOR APPLICATIONS ON SUCTION LIFT**

STARTING PRESSURE SWITCH (CONTACT OPEN AT LOW PRESSURE)

FLOAT SWITCH IN PRIMING TANK (CONTACT OPEN AT LOW LEVEL)

**FOR "EN" APPLICATION**

NO1 STARTING PRESSURE SWITCH (CONTACT OPEN AT LOW PRESSURE)

NO2 STARTING PRESSURE SWITCH (CONTACT OPEN AT LOW PRESSURE)

**FOR "EN" APPLICATION ON SUCTION LIFT**

NO1 STARTING PRESSURE SWITCH (CONTACT OPEN AT LOW PRESSURE)

NO2 STARTING PRESSURE SWITCH (CONTACT OPEN AT LOW PRESSURE)

FLOAT SWITCH IN PRIMING TANK (CONTACT OPEN AT LOW LEVEL)

1st ISSUE	I.D.	JB	13/02/06
REVISION	DRAWN BY	CHECKED BY	DATE

**NORTH WEST SWITCHGEAR Ltd**

MORECAMBE LANCASHIRE

DIAGRAM FOR STAR/DELTA CONTROLLER(132kW & Above)

LPC/EN **A2-17900**